

# NT™ Pressure Transducer Models 4100, 4210

## *User Guide*



# Table of Contents

<b>Safety Alert Symbol</b> .....	<b>2</b>	<b>Certifications</b> .....	<b>11</b>
<b>Introduction</b> .....	<b>2</b>	CE Compliance .....	11
<b>Installation</b> .....	<b>3</b>	Hazardous Locations and Explosive Atmospheres .....	11
Mechanical Installation .....	3	<b>Ordering Information</b> .....	<b>12</b>
Electrical Installation .....	4	Model 4100 Single-port .....	12
Power Supply Requirements .....	4	Model 4210 Flow-through .....	13
Warnings and Safety .....	5	<b>Installation Drawings</b> .....	<b>14</b>
<b>Unit Operation</b> .....	<b>6</b>	Model 4100 Single-port .....	14
Operating Environment .....	6	Model 4210 Flow-through .....	16
Process Connections .....	6	Control Drawing .....	18
Pressure Transducer Cover Assembly .....	6	<b>Appendix</b> .....	<b>19</b>
Pressure and Temperature Requirements .....	6	<b>For More Information</b> .....	<b>22</b>
Pressure Limits .....	7	<b>Terms and Conditions of Sale</b> ....	<b>22</b>
Pressure Reference Accuracy .....	7	<b>Limited Warranty</b> .....	<b>22</b>
Linear Output Signal .....	8		
<b>Troubleshooting</b> .....	<b>9</b>		
<b>Reference</b> .....	<b>10</b>		
Physical Specifications .....	10		
Electrical Specifications .....	10		
Performance Specifications .....	10		

## Safety Alert Symbol



### WARNING!

Indicates a hazardous situation which, if not avoided, could result in serious injury or death.

## Introduction


This manual is for use with the following standard NT Pressure Transducer 4000 Series Models 4100 and 4210. These instruments have been designed for use in high purity applications in the semiconductor industry.

These products feature no moving parts and no filled cavities, which reduces the possibility of a contaminated process. The wetted parts of these nonmetallic transducers are constructed with PTFE, PFA or other similar high purity inert materials.




**WARNING!** Attempting to install or operate standard NT 4000 Series Pressure Transducers without reviewing the instructions contained in this manual could result in personal injury or equipment damage.

### Cut-away Example: NT Single-port Pressure Transducer

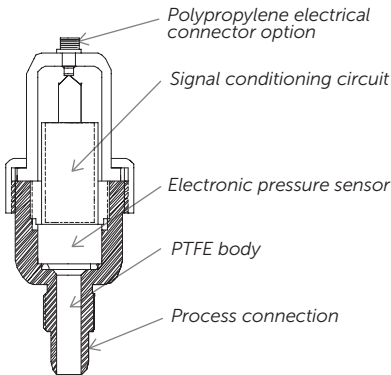

### Cut-away Example: NT Flow-through Pressure Transducer

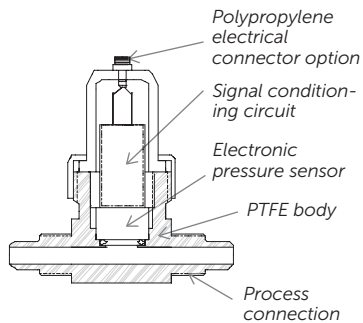

# Installation

**!** **WARNING!** The pressure transducer has been factory sealed. Do not attempt to remove the cover of the pressure transducer. Any attempt at removal of the pressure transducer cover will void the warranty and damage the unit.

**!** **WARNING!** Do not tighten the nuts that protect the process connections during shipment. Do not tighten the nuts unless the proper tubing has been installed. Tightening these nuts may result in damage to the pressure transducer process connections.

## MECHANICAL INSTALLATION

---


**NOTE:** For detailed Flaretek® and PrimeLock® tube fitting assembly instructions, visit [www.entegris.com](http://www.entegris.com).

**NOTE:** For detailed Super 300 Type Pillar® tube fitting assembly instructions, contact Nippon Pillar Packaging Company, Ltd.

## ELECTRICAL INSTALLATION

The pressure transducer provides an analog (0–5 VDC, 0–10 VDC or 4–20 mA) electrical output proportional to the pressure measured.

**NOTE: The white wire is not required for the 4–20 mA output configuration, please refer to the wiring diagrams below.**

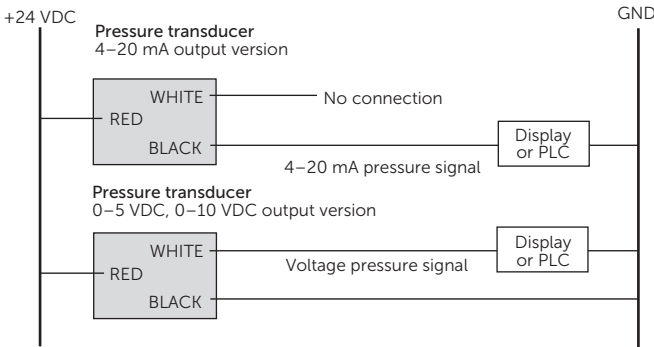

### Electrical connector information

WIRE	4–20 MA OUTPUT VERSION	VOLTAGE OUTPUT VERSION
Red VDC+	24 VDC (12–30 VDC)	24 VDC (12–30 VDC)
Black VDC–	Ground	Ground
White	Not used	0–5 VDC signal or 0–10 VDC signal

## POWER SUPPLY REQUIREMENTS

The pressure transducer requires a 12–30 volt DC power supply with less than 2% ripple at 100 or 120 Hz. The required power supply voltage varies with the load resistance ( $R_{Load}$ ), please refer to the formulas on page 5. The power supply must provide clean power and must be used only to power similar measurement-type devices. The power supply must not be used to power inductive loads, such as motors, relays or solenoids. These devices may produce

transients that may affect the pressure transducer measurements when the inductive device is powered up or powered down.

**NOTE: Be sure to ground the shield of the cable to local ground.**

## WARNINGS AND SAFETY

- ⚠ WARNING!** For use in Class I Division 2 Hazardous Environments, models with disconnecting cable options must be wired in accordance with the control drawing 01-1033562 on page 18.
- ⚠ WARNING!** For use in Class I Zone 2 Hazardous Environments, models with disconnecting cable options must be wired in accordance with the control drawing 01-1033562 on page 18.
- ⚠ WARNING!** Do not remove or replace while circuit is live unless the area is known to be free

of ignitable concentrations of flammable substances.

- ⚠ WARNING!** Do not replace components unless power has been disconnected or the area is known to be free of ignitable concentrations.
- ⚠ WARNING!** Explosion hazard. Do not connect while the circuit is live or unless the area is known to be free of ignitable concentrations.
- ⚠ WARNING!** Substitution of components may impair suitability for Division 2 and/or Zone 2.
- ⚠ WARNING!** Potential electrostatic charging hazard. For Hazardous Environment use, Entegris recommends using the pressure transducer in conjunction with ESD tubing, such as FluoroLine® Electrostatic Dissipative (ESD) Tubing.

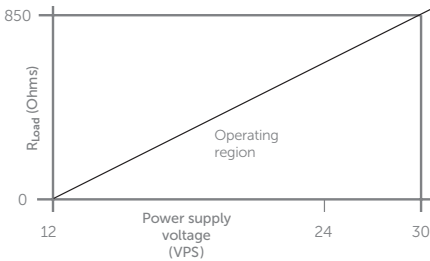


Figure 1. Power required for a 4–20 mA loop.

### Load Resistance: Current Output (4–20 mA Configuration)

If a load resistor,  $R_{Load}$ , is used in series with the current output, the value of  $R_{Load}$  is dependent on the supply voltage and the meter resistance and is calculated from the following formula:

$$R_{Load} = \frac{V_{PS} - 12 \text{ V}}{20 \text{ mA}} - R_{meter}$$

where:

$R_{Load}$  = maximum load resistance (ohms)

$V_{PS}$  = power supply voltage (volts)

$R_{meter}$  = meter resistance (ohms) (theoretically = 0)

### Load Resistance: Voltage Output (0–5, 0–10 VDC)

The output impedance is 1 kOhm. The input impedance should be  $\geq 1$  megohm for  $\pm 0.1\%$  load impedance error.

# Unit Operation

## OPERATING ENVIRONMENT

---

The pressure transducer is to be mounted in a well vented and controlled environment. Refer to the *Reference* section on page 10 for additional specifications.

## PROCESS CONNECTION


---

To avoid possible pressure leaks, make sure all process connections have been performed in accordance with the *Mechanical Installation* guidelines on page 3.

## PRESSURE TRANSDUCER COVER ASSEMBLY

---

NT Pressure Transducer covers are factory sealed and should not be tampered with or opened. Opening the cover shall void the product warranty.


 **WARNING! Any attempt to remove or tamper with the transducer cover will void the warranty and damage the unit.**

## PRESSURE AND TEMPERATURE REQUIREMENTS

---

The minimum pressure required is atmospheric pressure. The pressure transducer may be damaged if subjected to vacuum pressure (pressure that is less than atmospheric pressure).

The pressure transducer is rated for use with fluids at process temperatures between 10–65°C (50–149°F) under normal operating conditions.

 **WARNING! NT Pressure Transducers, Models 4100 and 4210 may be damaged if the sensor is subjected to any level of vacuum pressure (pressure less than atmospheric pressure).**

## PRESSURE LIMITS

---

TRANSDUCER RANGE	MAXIMUM OVER PRESSURE LIMIT @ 23°C (73°F)	MAXIMUM OVER PRESSURE LIMIT @ 65°C (149°F)
0–30 psig	690 kPa (100 psig)	690 kPa (100 psig)
0–60 psig	1034 kPa (150 psig)	690 kPa (100 psig)
0–100 psig	1034 kPa (150 psig)	690 kPa (100 psig)
0–150 psig	1310 kPa (190 psig)	N/A

Maximum over pressure can be limited by the fitting. Consult the fitting specification for maximum over pressure limits.

**⚠ WARNING! The pressure limits for standard NT Pressure Transducers (4000 Series) decrease significantly for temperatures above 65°C (149°F). Exceeding these limits may result in personal injury or equipment damage.**

## PRESSURE REFERENCE ACCURACY



---

The accuracy of the pressure transducer output is  $\pm 1\%$  of full scale. This accuracy includes the effects of linearity, hysteresis and repeatability, measured at room temperature. Accuracy specifications for non-standard product configurations might vary.



## LINEAR OUTPUT SIGNAL

The output signal of the pressure transducer is a linear function proportional to the applied pressure.

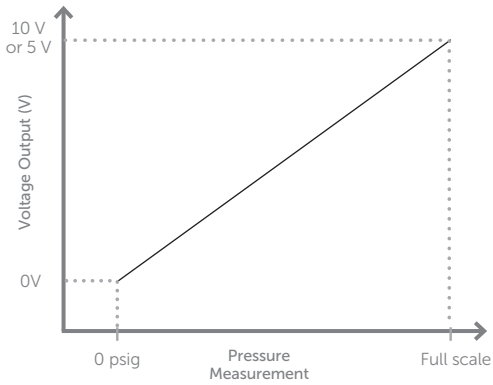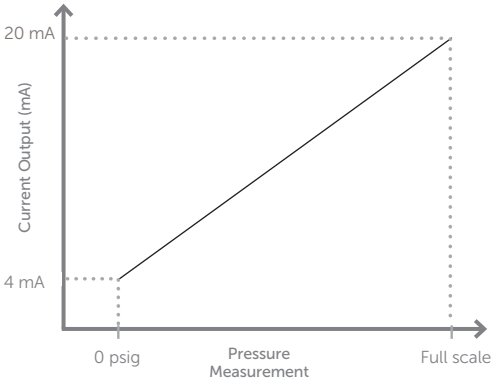

# Troubleshooting

Troubleshooting the NT Pressure Transducers may be accomplished by measuring the output signal of the pressure transducer with a battery powered current/voltage meter. The meter may be placed in series with the pressure transducer to measure the current output or it may be used to directly measure the voltage output.

Using the battery powered current/volt meter is an effective method to determine whether the device or the on-site data acquisition system is not functioning properly.

# Reference

The following lists the specifications for the NT Pressure Transducer product line. Please consult the factory for product specifications manufactured for nonstandard applications.

**NOTE: Specifications are subject to change without notice.**

## Physical Specifications:

<b>Materials</b>	Wetted parts	Body	PTFE
		Sensor interface	CTFE or PFA
		O-ring	Perfrez®
	Nonwetted parts	Polypropylene, polyethylene, Viton®, PVDF (in addition to materials listed above)	
<b>Connection type</b>	Flaretek tube fitting, Super 300 Type Pillar tube fitting, NPT (PrimeLock available upon request.)		

## Electrical Specifications:

<b>Input voltage</b>	24 VDC (12–30 VDC)
<b>Input current</b>	20 mA maximum
<b>Pressure signal output ranges</b>	4–20 mA, 0–5 VDC, 0–10 VDC
<b>Electrical connection</b>	6', 12', 30' FEP-jacketed pigtail or polypropylene 3-pin connector
<b>Electrical enclosure</b>	IP54

## Performance Specifications

<b>Reference accuracy</b>	±1% of full scale (includes linearity, hysteresis and repeatability) at 23°C (73°F)
<b>Process temperature</b>	10–65°C (50–149°F)

# Certifications



Entegris products have been tested to various test standards required by the EMC 2014/30/EU directive. The results of this testing are on file at Entegris and are available upon request.

Please contact the factory for the latest information. The most current specifications may be found on Entegris' Web site at: [www.entegris.com](http://www.entegris.com)

## HAZARDOUS LOCATIONS AND EXPLOSIVE ATMOSPHERES

### North America — Class I Division 2

Entegris has tested our standard products to the UL 61010-1, UL 12.12.01 standards for use in Class I, Division 2 Gas Groups A-D,  $T_6$   $10^{\circ}\text{C} \leq T_a \leq 65^{\circ}\text{C}$  (maximum  $90^{\circ}\text{C} T_{\text{process}}$ ) hazardous environments.

### Europe — Zone 2

Entegris has tested our standard products to the EN 60079-0, EN 60079-11 standards for use in Zone 2 Gas Group IIC,  $T_5$   $10^{\circ}\text{C} \leq T_a \leq 65^{\circ}\text{C}$  (maximum  $90^{\circ}\text{C} T_{\text{process}}$ ) hazardous environments, in accordance with EU Directive 2014/34/EU.

### International — Zone 2

Entegris has tested our standard products to the IEC 60079-0, IEC 60079-11 standards for use in Zone 2 Gas Group IIC,  $T_5$   $10^{\circ}\text{C} \leq T_a \leq 65^{\circ}\text{C}$  (maximum  $90^{\circ}\text{C} T_{\text{process}}$ ) hazardous environments.

### Korean Certificate Safety (KCs)

Entegris has tested our standard products in accordance with Article 34 of the Occupational Safety & Health Act.

The results of this testing are on file at Entegris and are available upon request.



		Conforms to UL Std 61010-1, UL Std 651010-1 Class I, Div 2, Groups A-D, T6 10°C ≤ Ta ≤ 65°C, IP54 Input: 24 VDC, 20 mA Max.	IECEx ETL 19.0009X Ex ic: IIC T5 Gc
			UL: 30V Ii: 120 mA Pi: 900 mW Ci: 25 nF Li: 0.0 mH Chaska, MN 55318

		See Control Drawing 01-1033562 for Input Entry Parameters Conforms to UL Std 61010-1, UL Std 651010-1 Class I, Div 2, Groups A-D, T6 10°C ≤ Ta ≤ 65°C, IP54 Input: 30 VDC, 120 mA Max.	IECEx ETL 19.0009X Ex ic: IIC T5 Gc
			UL: 30V Ii: 120 mA Pi: 900 mW Ci: 25 nF Li: 0.0 mH Chaska, MN 55318


		Conforms to UL Std 61010-1, UL Std 651010-1 Class I, Div 2, Groups A-D, T6 10°C ≤ Ta ≤ 65°C, IP54 Input: 24 VDC, 20 mA Max.	IECEx ETL 19.0009X Ex ic: IIC T5 Gc
			UL: 30V Ii: 120 mA Pi: 900 mW Ci: 0.48 nF Li: 0.0 mH Chaska, MN 55318

		See Control Drawing 01-1033562 for Input Entry Parameters Conforms to UL Std 61010-1, UL Std 651010-1 Class I, Div 2, Groups A-D, T6 10°C ≤ Ta ≤ 65°C, IP54 Input: 30 VDC, 120 mA Max.	IECEx ETL 19.0009X Ex ic: IIC T5 Gc
			UL: 30V Ii: 120 mA Pi: 900 mW Ci: 0.48 nF Li: 0.0 mH Chaska, MN 55318

# Ordering Information


Refer to the following for the desired configuration.

## Model 4100 Single-port Pressure Transducer: part number

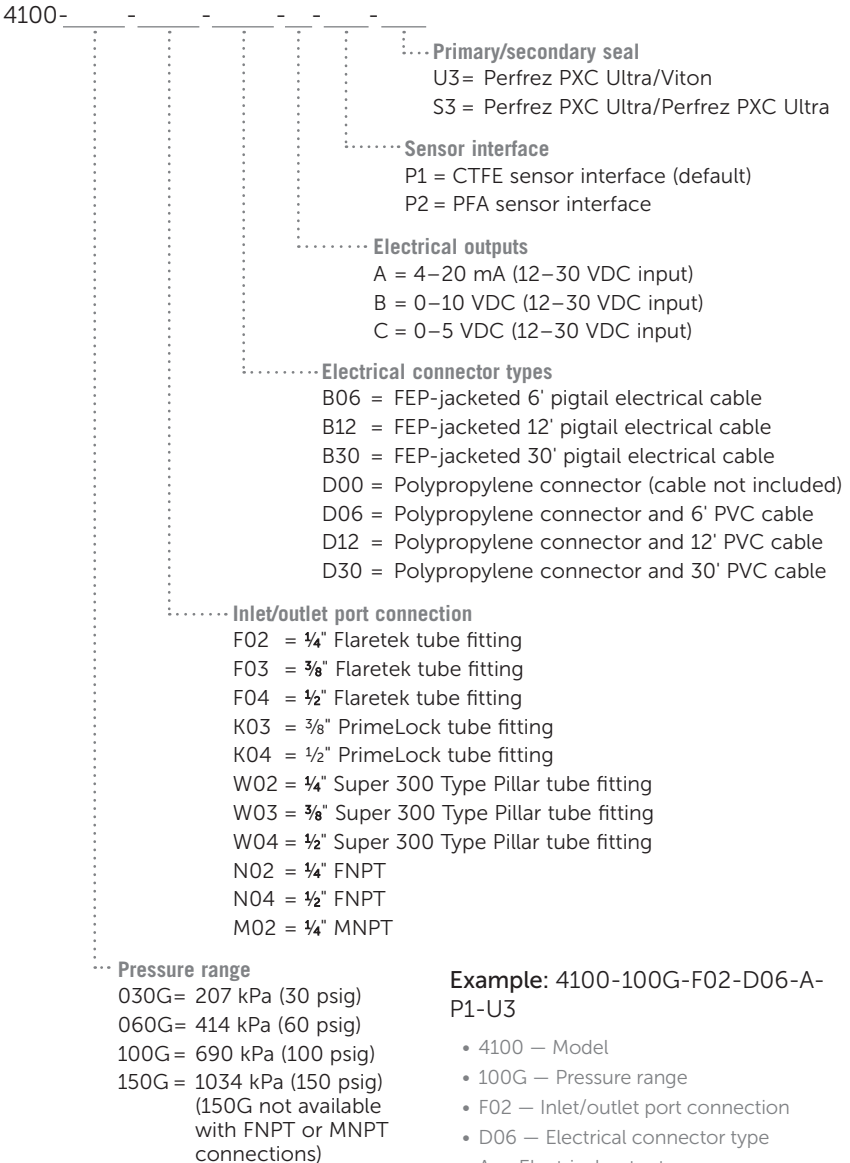

Model 4210 Single-port Pressure Transducer: part number

4210-

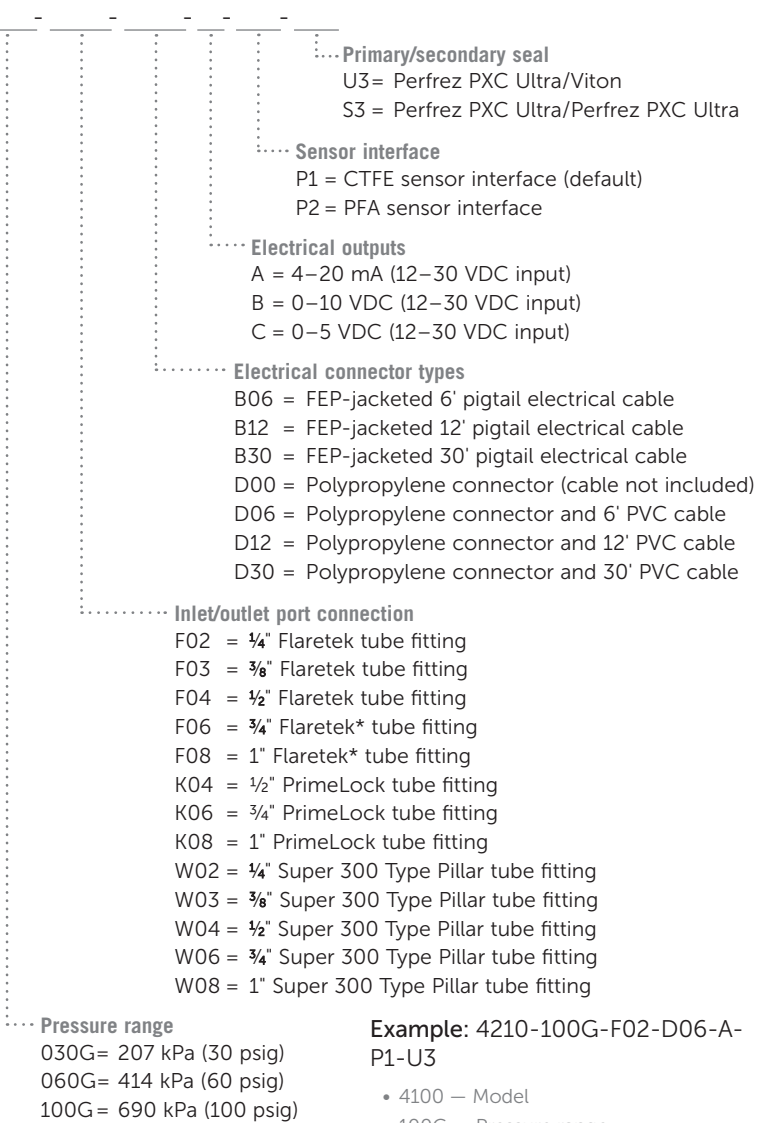

**Example:** 4210-100G-F02-D06-A-P1-U3

- 4100 — Model
- 100G — Pressure range
- F02 — Inlet/outlet port connection
- D06 — Electrical connector type
- A — Electrical outputs
- P1 — Sensor interface
- U3 — Primary/secondary seal


*\*For detailed pressure limit information on Flaretek tube fitting connections, refer to the Maximum Pressure Capabilities chart in the Flaretek fittings product section on Entegris' website at <http://www.entegrisfluidhandling.com>.*

# Installation Drawings


## 4100 Single-port Pressure Transducer

### Flaretek Connection


3 conductor pigtail connection (BXX)(cable length up to 30 feet)

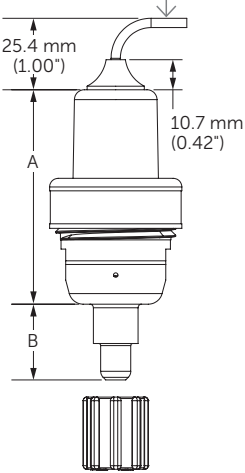


### PrimeLock Connection

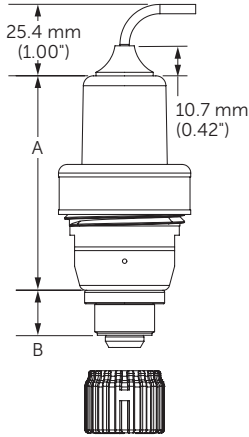


### Super 300 Type Pillar Connection

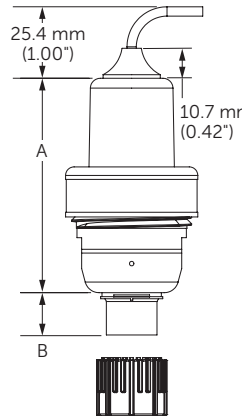

### Male Pipe Thread Connection

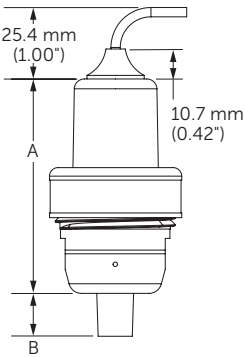

### Female Pipe Thread Connection

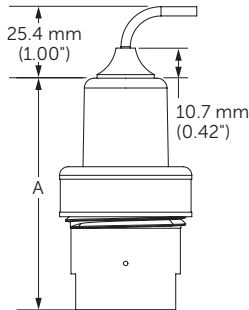


<b>INLET/OUTLET PORT CONNECTION</b>	<b>A</b>	<b>B</b>
<b>¼" Flaretek tube fitting</b>	76.2 mm (3.00")	25.2 mm (0.99")
<b>¾" Flaretek tube fitting</b>	76.2 mm (3.00")	26.9 mm (1.06")
<b>½" Flaretek tube fitting</b>	76.2 mm (3.00")	29.0 mm (1.14")
<b>¾" PrimeLock tube fitting</b>	76.2 mm (3.00")	20.3 mm (0.80")
<b>½" PrimeLock tube fitting</b>	76.2 mm (3.00")	22.6 mm (0.89")
<b>¼" FNPT</b>	82.3 mm (3.24")	–
<b>½" FNPT</b>	88.9 mm (3.50")	–
<b>¼" MNPT</b>	76.2 mm (3.00")	15.0 mm (0.59")
<b>¼" Super 300 Type Pillar tube fitting</b>	76.2 mm (3.00")	11.0 mm (0.43")
<b>¾" Super 300 Type Pillar tube fitting</b>	76.2 mm (3.00")	15.0 mm (0.59")
<b>½" Super 300 Type Pillar tube fitting</b>	76.2 mm (3.00")	17.5 mm (0.69")




## 4210 Flow-through Pressure Transducer

### Flaretek Connection

#### Side View

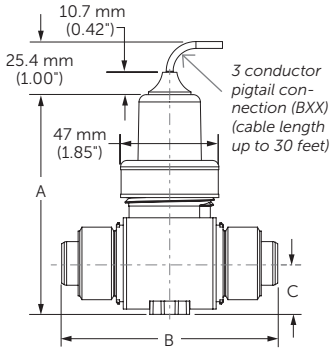


#### Top View

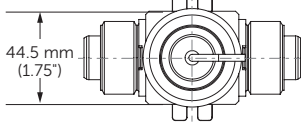


### PrimeLock Connection

#### Side View

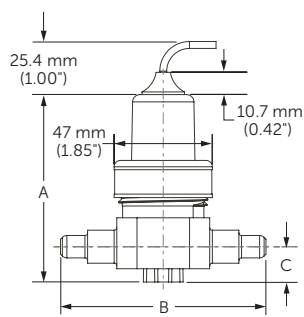


#### Top View



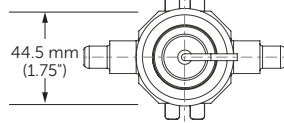


### Super 300 Type Pillar Connection

#### Side View

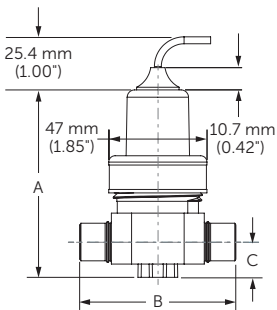

#### Top View

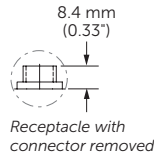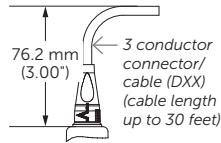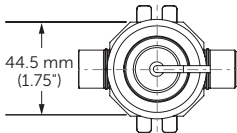

<b>Inlet/outlet port connection</b>	<b>A</b>	<b>B</b>	<b>C</b>
<b>¼" Flaretek tube fitting</b>	89.7 mm (3.53")	94.7 mm (3.73")	18.5 mm (0.73")
<b>⅜" Flaretek tube fitting</b>	89.7 mm (3.53")	98.3 mm (3.87")	17.0 mm (0.67")
<b>½" Flaretek tube fitting</b>	96.0 mm (3.78")	102.4 mm (4.03")	21.6 mm (0.85")
<b>¾" Flaretek tube fitting</b>	104.4 mm (4.11")	108.5 mm (4.27")	25.4 mm (1.00")
<b>1" Flaretek tube fitting</b>	112.5 mm (4.43")	120.7 mm (4.75")	30.5 mm (1.20")
<b>½" PrimeLock tube fitting</b>	92.2 mm (3.63")	89.7 mm (3.53")	17.5 mm (0.69")
<b>¾" PrimeLock tube fitting</b>	105.2 mm (4.41")	103.4 mm (4.07")	24.4 mm (0.96")
<b>1" PrimeLock tube fitting</b>	113.5 mm (4.47")	112.5 mm (4.43")	28.4 mm (1.12")
<b>¼" Super 300 Type Pillar tube fitting</b>	89.7 mm (3.53")	66.5 mm (2.62")	18.5 mm (0.73")
<b>⅜" Super 300 Type Pillar tube fitting</b>	89.7 mm (3.53")	74.5 mm (2.93")	17.0 mm (0.67")
<b>½" Super 300 Type Pillar tube fitting</b>	96.0 mm (3.78")	79.5 mm (3.13")	21.6 mm (0.85")
<b>¾" Super 300 Type Pillar tube fitting</b>	104.4 mm (4.11")	88.4 mm (3.48")	25.4 mm (1.00")
<b>1" Super 300 Type Pillar tube fitting</b>	111.8 mm (4.40")	98.6 mm (3.88")	29.7 mm (1.17")

Note: No NPT option on Model 4210.

# Control Drawing 01-1033562

## Nonincendive Field Wiring Required for Disconnecting Cable Options

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2
3
4
5
6

D
C
B
A

1
2

# Appendix

Table 1. Entity parameters for Models NT4100, NT4210 with 4–20 mA output (see note 1.)

<b>Cable option conductor color</b>	A00, DXX cable option	Red and black
<b>Signals</b>	Power and ground	
<b>V<sub>max</sub></b>	30 VDC	
<b>I<sub>max</sub></b>	120 mA	
<b>P<sub>i</sub></b>	0.9 W	
<b>C<sub>i</sub></b>	25 nF	
<b>L<sub>i</sub></b>	0.0 mH	

Table 2. Entity parameters for Models NT4100, NT4210 with voltage output (see note 2.)

<b>Cable option conductor color</b>	A00, DXX cable option	Red and black
<b>Signals</b>	Power and ground	
<b>V<sub>max</sub></b>	30 VDC	
<b>I<sub>max</sub></b>	120 mA	
<b>P<sub>i</sub></b>	0.9 W	
<b>C<sub>i</sub></b>	0.48 nF	
<b>L<sub>i</sub></b>	0.0 mH	

Table 3. Nonincendive field wiring apparatus vs. associated nonincendive field wiring apparatus requirements

<b>NONINCENDIVE FIELD WIRING APPARATUS (MODEL NT4100/4200)</b>	<b>RELATIONSHIP</b>	<b>ASSOCIATED NONINCENDIVE FIELD WIRING APPARATUS</b>
<b>V<sub>max</sub></b>	≥	V <sub>oc</sub>
<b>I<sub>max</sub></b>	≥	I <sub>sc</sub>
<b>P<sub>i</sub></b>	≥	P <sub>o</sub>
<b>C<sub>i</sub> + C cable (60 pf/ft)</b>	≤	C <sub>a</sub>
<b>L<sub>i</sub> + L cable (0.2 uH/ft)</b>	≤	L <sub>a</sub>

**NOTES:**

1. For use in Class I Division 2 or Zone 2 Groups A, B, C, D, the following pressure transducer models must be used with an approved associated nonincendive field wiring apparatus that meets the requirements in Table 3 with the entity parameters in Table 1.

4100-XXXX-XXX-A00-A-XX-XX  
4100-XXXX-XXX-DXX-A-XX-XX  
4210-XXXX-XXX-A00-A-XX-XX  
4210-XXXX-XXX-DXX-A-XX-XX

2. For use in Class I Division 2 or Zone 2 Groups A, B, C, D, the following pressure transducer models must be used with an approved associated nonincendive field wiring apparatus that meets the requirements in Table 3 with the entity parameters in Table 2.

4100-XXXX-XXX-A00-B-XX-XX  
4100-XXXX-XXX-DXX-B-XX-XX  
4100-XXXX-XXX-XXX-B-XX-XX-PXX  
4100-XXXX-XXX-A00-C-XX-XX  
4100-XXXX-XXX-DXX-C-XX-XX  
4210-XXXX-XXX-A00-B-XX-XX  
4210-XXXX-XXX-DXX-B-XX-XX  
4210-XXXX-XXX-XXX-B-XX-XX-TXX  
4210-XXXX-XXX-A00-C-XX-XX  
4210-XXXX-XXX-DXX-C-XX-XX  
4210-XXXX-XXX-XXX-C-XX-XX-TXX

# Notes

## FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit [entegris.com](https://www.entegris.com) and select the [Contact Us](#) link to find the customer service center nearest you.

## TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit [entegris.com](https://www.entegris.com) and select the [Terms & Conditions](#) link in the footer.

## LIMITED WARRANTY

Entegris' products are subject to the Entegris, Inc. General Limited Warranty. To view and print this information, visit [entegris.com](https://www.entegris.com) and select the [Legal & Trademark Notices](#) link in the footer. Entegris does not warranty any failure in the case of customers using unapproved foreign components.



Corporate Headquarters  
129 Concord Road  
Billerica, MA 01821  
USA

Customer Service  
Tel +1 952 556 4181  
Fax +1 952 556 8022  
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design®, and other product names are trademarks of Entegris, Inc. as listed on [entegris.com/trademarks](https://www.entegris.com/trademarks). All third-party product names, logos, and company names are trademarks or registered trademarks of their respective owners. Use of them does not imply any affiliation, sponsorship, or endorsement by the trademark owner.

©2012-2024 Entegris, Inc. | All rights reserved. | Printed in the USA | 3960-5426ENT-0624